

Step 8

Attach the rear bar to the front bars with mounting brackets and M10 shoulder bolt, all mounts are swivel to assure that the tower will be aligned evenly and your feet will be squarely positioned and fits most secure.



8a. All mounts are swivel

Step 9

Secure the set screws so that there will not be any movement in the pivot once the tower is secure. Double check all connections and fittings to assure everything is secure and solid.




How to fold the tower

- I. Disconnect tower from front mounts
- II. Loosen the rear mounts
- III. Fold tower back to down position.

Care and Maintenance

- I. Be sure to check and tighten all fasteners and connections prior to every use.
- II. Be cautious when towing or driving under obstacles, low hanging structures or trees with your towers on.
- III. Use soap and water or general cleaners to clean your tower. Avoid abrasive materials that might scratch the tower's finish.
- IV. Always rinse tower after contact with salt (brackish) water.

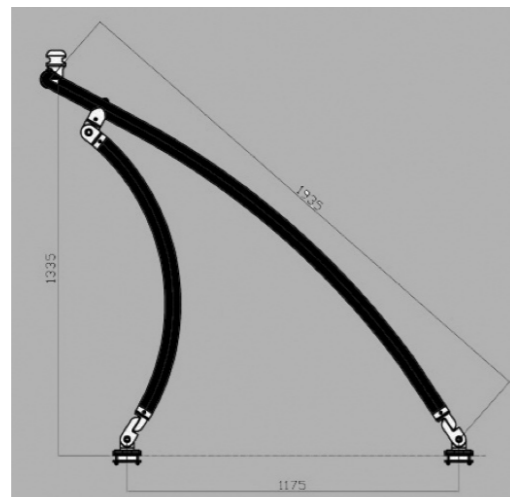

JOBE Addict Tower Warranty

Jobe Europe warrants this product (not including other 3rd party accessories) against manufacturers defects. Anodizing and powder coated surfaces as well as all hardware corrosion are specifically excluded as their care and use cannot be controlled by Jobe Europe. Any modifications or improper use shall void this warranty. Jobe Europe is not responsible for personal injury or damage to the boat caused by the use of this tower. JOBE's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. No dealer, retailer or manufacturer is the agent of Jobe Europe and may not assume for Jobe Europe any liability in connection with this warranty. This warranty is in lieu of all.

Distributed by:


Sport en Recreatie Den Bol B.V.
Heerewardensestraat 30
6624 KK Heerwaarden
The Netherlands

WWW.WAKESKI.COM

JOBE ADDICT 11

INSTALLATION GUIDE

Check WWW.WAKESKI.COM for other languages of this manual

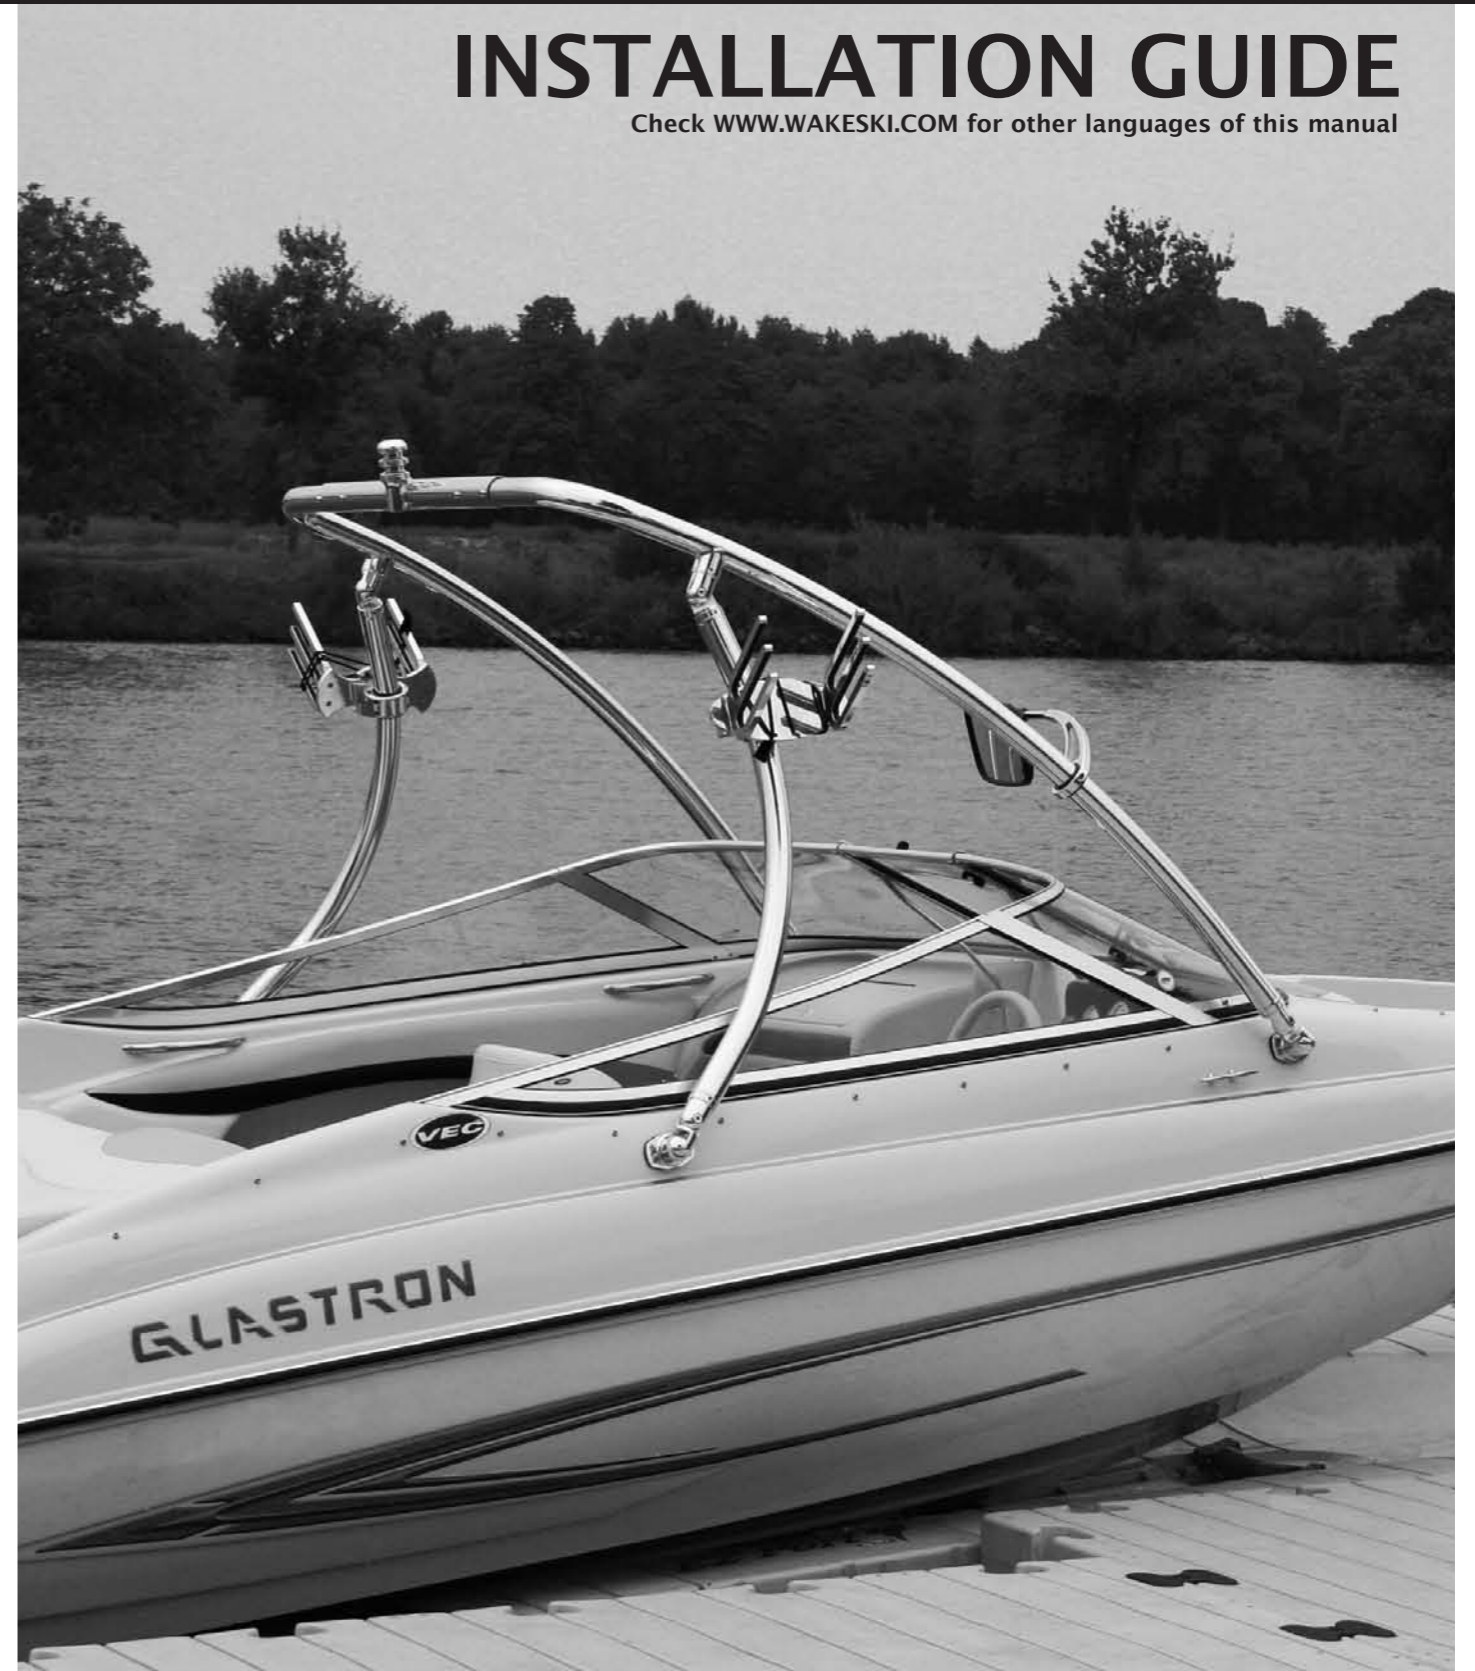

Operating under the theory that an ounce of prevention is worth a pound of headaches, here is a helpful hint that will prevent any scratching during the Addict Tower assembly.

As you are removing the 4 arms and top center section out of the box, place masking tape strips around the top conjunction sections of the tubes that slide inside, and you will need to duplicate this process for both the front and rear. This will let you move and adjust the front and rear tower tubes without scratching the finish. But please use caution when sliding the sections together.

Keep the masking tape in place through the final assembly step, then, after drilling, remove the masking tape and your finish will be perfect.

Note that this installation guide is only a guideline. Each boat is different and improvisation is needed to mount your Addict tower on your boat.


Contents of Box

Unpack the carton, there will be 5 sections:

Hardware



Tower Mount setA

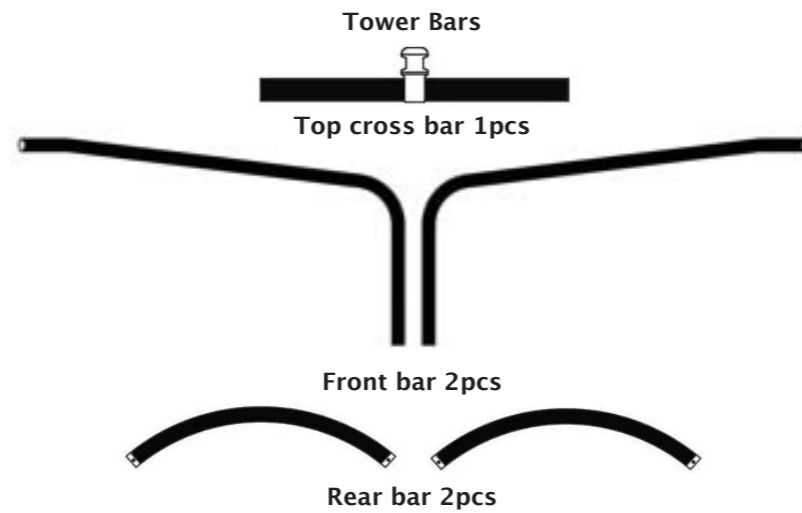

1a. Mask Mounting Area

Step 1

With masking tape cover the area where the mounting brackets will be placed. This should be done at all points where the tower will contact and the near surrounding area. This will help eliminate scratches to your boat while adjusting and measuring your tower attachment points.

Step 2

With your tape measure, measure the distance across the beam of your boat where the rear mounts will be fixed and write it down. Next, measure up from the rear mounts to the front mounting locations and mark a general location on the masking tape where the mount will sit.

Note: Both a side mounts as well as a top mounts are possible.



Note: For a side mount, be sure to add 1 1/2" to both sides of your tower bar width, for a total 3 additional inches to compensate for the brackets.

Step 3

Connect the two front tower bars to the top cross bar and also connect the two rear bent tower bars to the front ones. Now position the feet the same distance as the measurement you have from the rear mount beam.



Step 4

After assuring that your measurements are correct, secure the top cross bar with the front tower bars in the correct position. Drill with the 3/8 drill bit holes through the two front bars aligned with the predrilled hole in the top cross bar. Then take the supplied M10 bolts and nylon lock nut and connect the three bars together.



Step 5

Attach the connecting feet to the tower using the M10 shoulder bolt and secure with Allan wrench. Be sure to slide the mounting plate over the base foot before attaching it to the tower.



Base foot
Mounting plate

Step 6

Bring the assembled portion of the tower up to the rear mounting area and position on your area marks made before. Now mark the drill locations using the mounting plate as a template.



Using the rubber mount gasket to drill 4 holes



Step 7

Remove the tower from the boat and drill the holes with your 3/8 drill bit. Before drilling, inspect the underside of these locations for obstructions such as wires or cables. After drilling holes, chamfer outer edges of hole. This will prevent gel coat stress cracks and remove your masking tape on the rear location. Then place the tower back on to the location and with a rubber mounting plate between the tower mounting plate and the boat, as well as a bottom mounting plate under the fiberglass. Secure the rear mounts with the M6 flat socket caps and M6 nylon lock nuts.

